


GB TRAS 6230

QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".

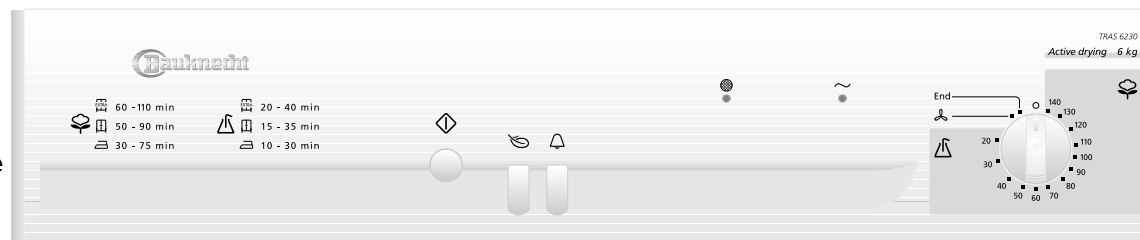

	Very Wet Load	Wet Load	Load	Drying options			
	Recommended drying times selection (in minutes)		kg	Fabric Drying Cycles & Drying levels		Gentle Reduces drying intensity (recommended for delicate items)	Buzzer Signals/Sounds end of drying cycle at intervals
Cotton	85' 110'	60' 100'	3.0 6.0	Cotton max 6 kg	Extra dry		
	65' 90'	50' 75'	3.0 6.0		Cupboard dry *		
	55' 75'	30' 65'	3.0 6.0		Iron dry *		
Synthetics	30' 40'	20' 35'	1.0 2.5	Synthetics max 2.5 kg	Extra dry		
	20' 35'	15' 30'	1.0 2.5		Cupboard dry *		
	15' 30'	10' 25'	1.0 2.5		Iron dry		
Airing	-	-	-	Airing 	Laundry is aired and refreshed for 18 minutes without heating.	-	

- Recommended drying times are based on minimum washing machine spinning speed of 800 rpm.
- As a rule longer drying times are needed if washing machine rpm lower than 800.
- The more absorbing and heavier the to be dried items are the longer the drying times should be.

* Test programmes according IEC 61121.

	Starts the drying cycle. Press to confirm the final selection.
On 	The indicator lamp lights up when Dryer is on.
Time selector knob 	Turn the time selector knob to the desired drying time. After the Start button is pressed the drying cycle starts.
Filter 	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
DRYING TIME SEQUENCE INDICATORS	
Airing End	The selector knob shows the progress of the cycle.

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols

(on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only



Do not tumble dry

B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics

Cotton/linen: towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics/Easy Care: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying.

Only use specific indicated dryer-safe plastic items and never dry rubber or articles contaminated with vegetable oil in the dryer.

SELECTING A DRYING TIME OR PROGRAMME & OPTIONS

Drying time or programme and Options:


- To select a drying time or programme, turn the drying time selector knob.
- To select an option, press the corresponding button.
- Press the button again to cancel the option.

STARTING & COMPLETING A DRYING CYCLE

1. Having selected the desired drying time or programme and options, press the Start button.
If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 12 min. The drum rotates at regular intervals, preventing the laundry from creasing.
2. On completion of the drying time or programme, set the drying time selector knob to position "0".

INTERRUPTING A DRYING TIME OR PROGRAMME

To interrupt the dryer during operation

1. Set the drying time selector knob to Airing "  ".
2. Wait at least 5 minutes before opening the door to allow the dryer to cool down.
For your safety the drying time or programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the **Start** button again.

DAILY MAINTENANCE & CLEANING

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
4. Push the filter back into place.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct drying time or programme and options selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the drying time or programme been selected?
- Has the **Start** button been pressed?

Lint filter indicator lamp on:

- Is the lint filter clean?
- Is the vent hose blocked?

AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000

